




Aspen/4 Leg

Desk
Assembly Guide

ST21250XX

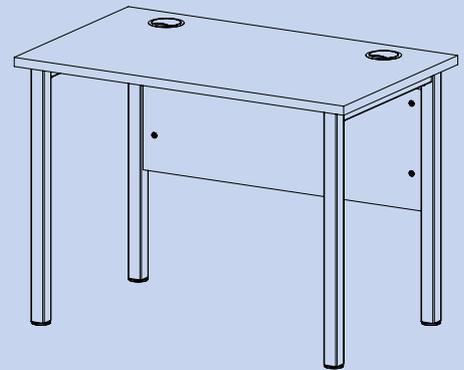


Fixings Supplied

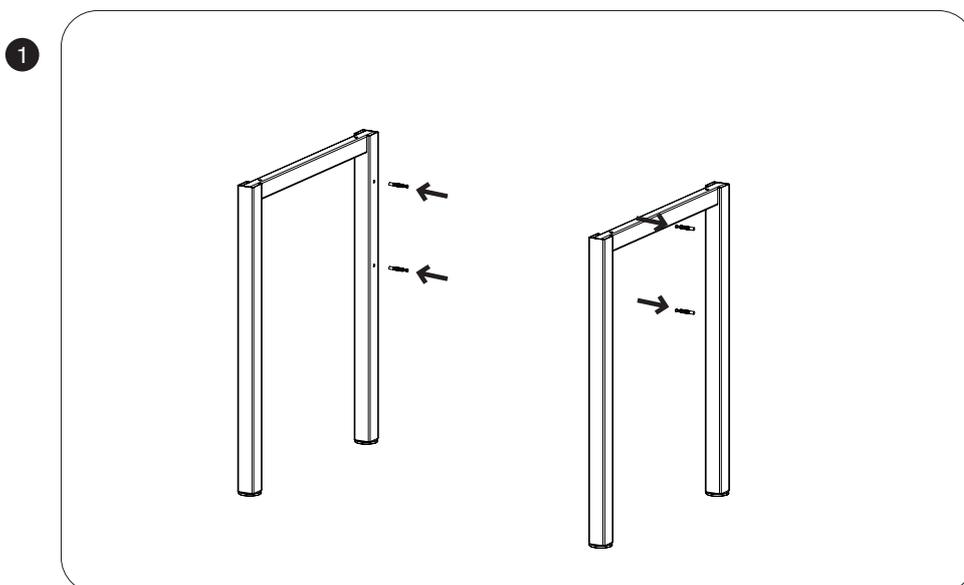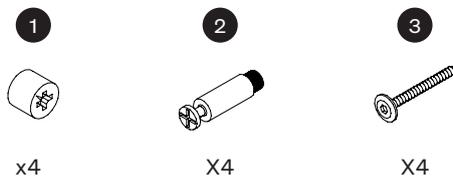


Insert 4 x Europins into leg frames

2

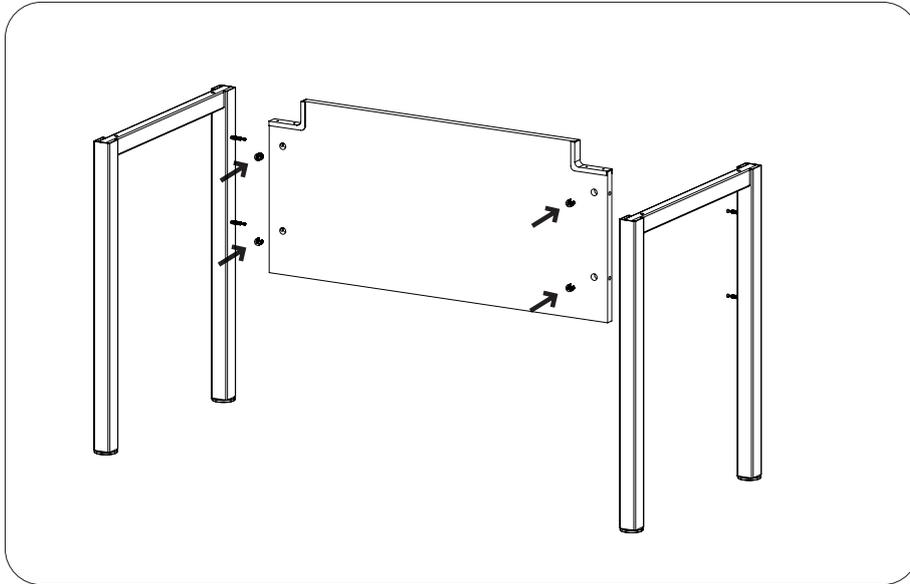

Insert 4 x CAM fittings into modesty panel.
Present Modesty panel to leg frames and tighten 4 x CAM fittings (Turning Clockwise)

3

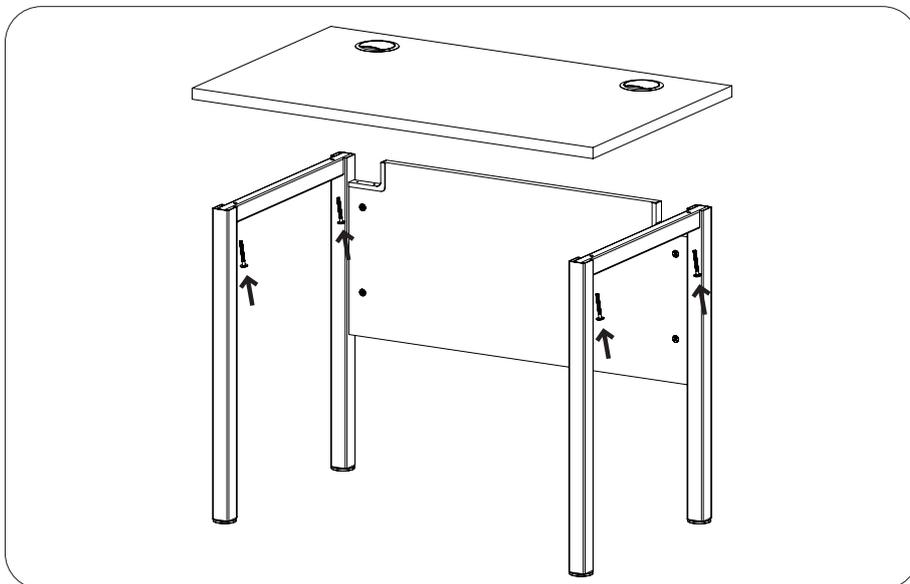

Align underframe to top panel and bolt through leg frames from underneath
into top using x4 M6 x 55 bolts

4

