




Aspen/Cantilever

Desk
Assembly Guide

ST21248XX

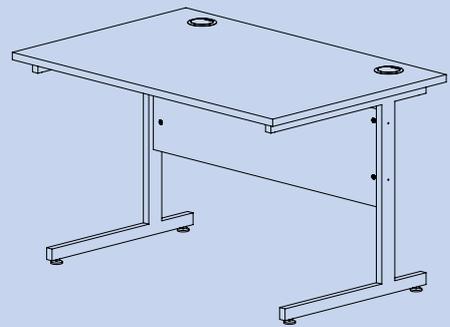


Fixings Supplied

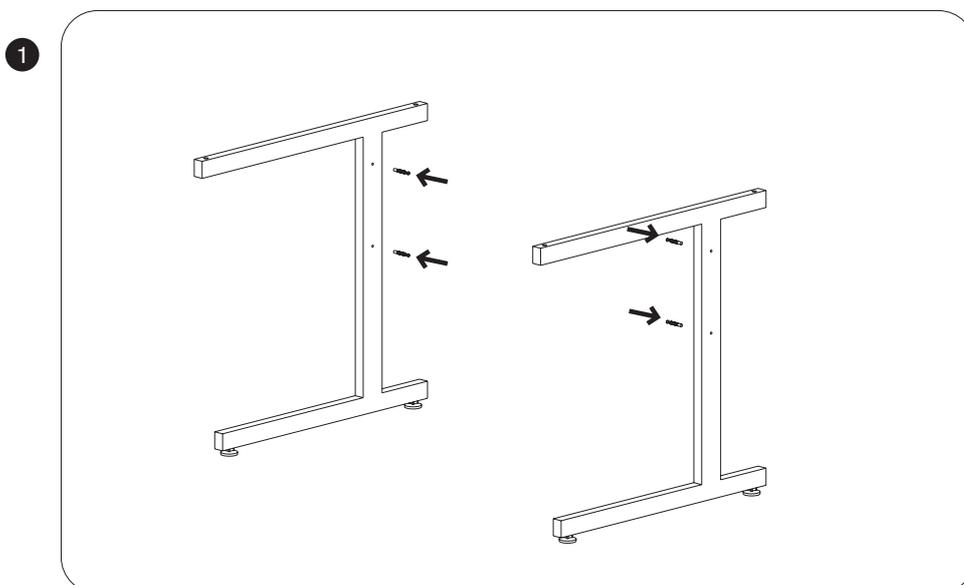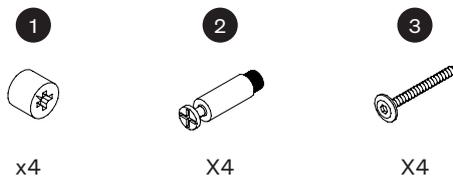


Insert 4 x Europins into leg frames

2

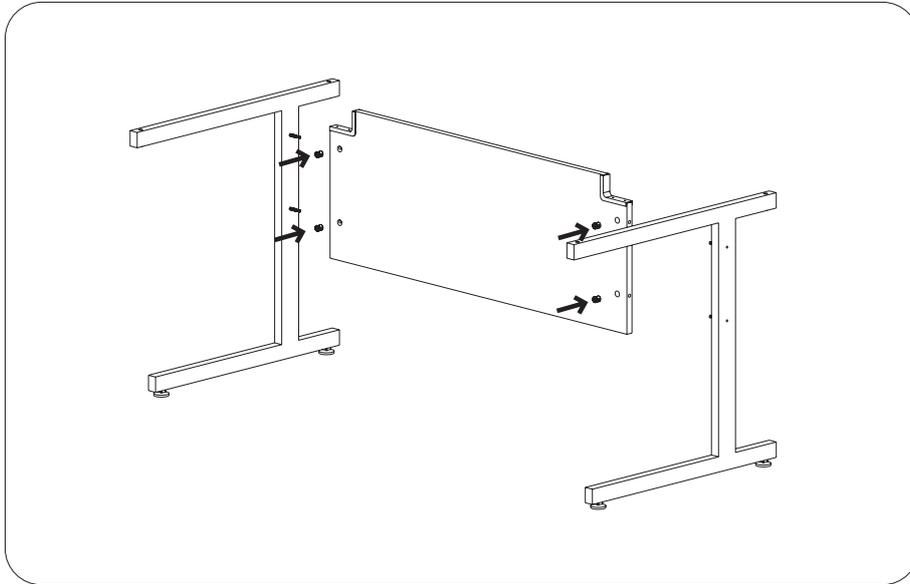

Insert 4 x CAM fittings into modesty panel.
Present Modesty panel to leg frames and tighten 4 x CAM fittings (Turning Clockwise)

3

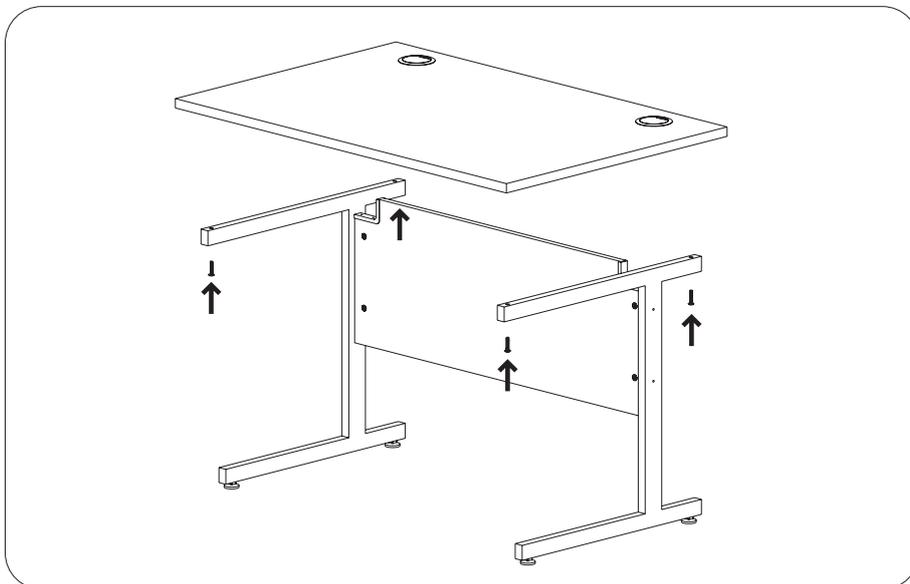

Align underframe to top panel and bolt through leg frames from underneath into top using x4 M6 x 35 bolts

4

