


Aspen/ Panel End

Desk
Assembly Guide

ST21249XX

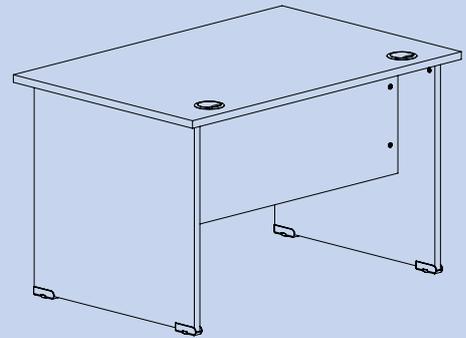

Fixings Supplied

1




x8

2




x8

1

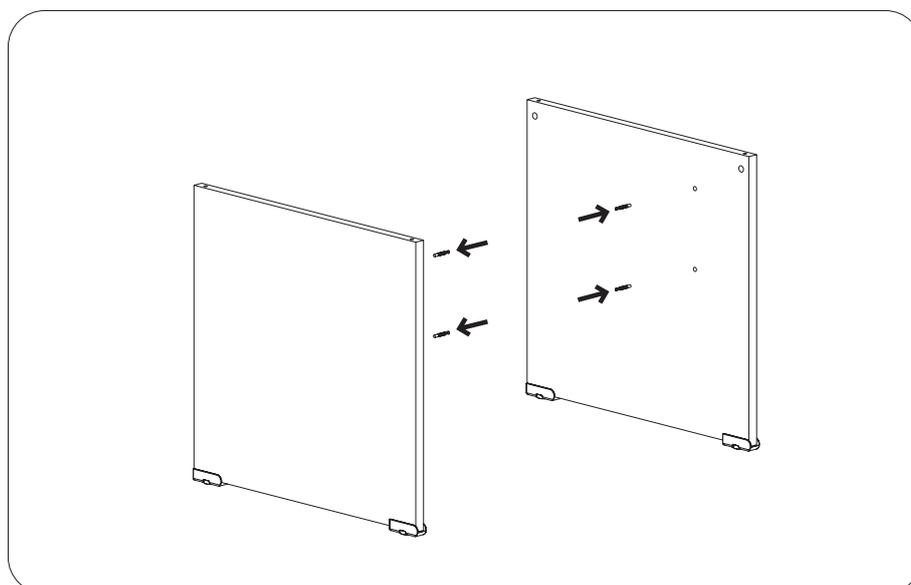


Insert 4 x Euro pins into side panels

2

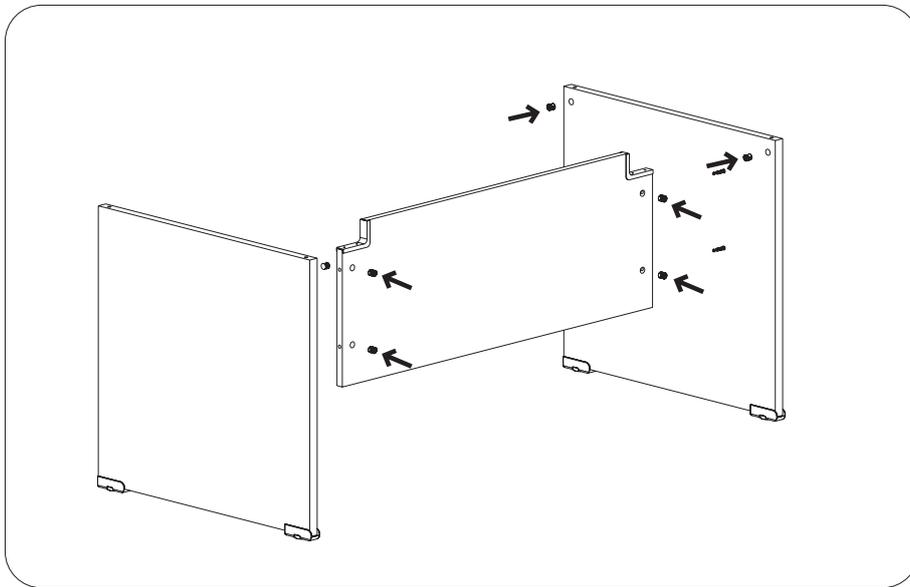

Insert 4 x CAM fittings into modesty panel and 4 CAM fittings into legs
Present Modesty panel to side panels and tighten 4 x CAM fittings (Turning Clockwise)

3

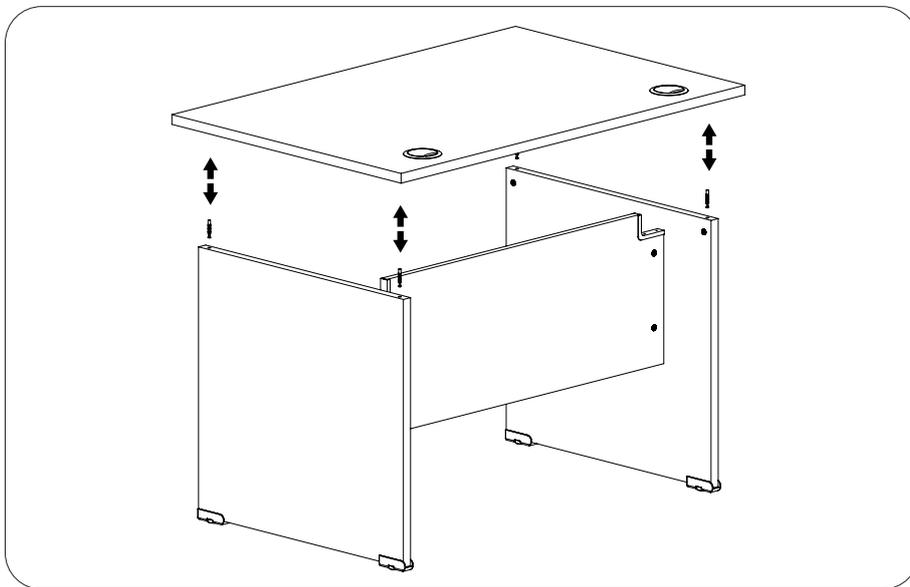

Fasten x4 Europins into top panel. Align under frame with Europins and tighten CAM fittings (Turning Clockwise)

4

